

How to install a shower base onto a concrete floor



installing the leak control flange



applying flexible tile adhesive onto the concrete



tilting the base down into the bed of adhesive




leveling in the base



moistening first then closing the gabs with expansion foam



creating little step with 100 mm  
building board... sealing all corners with corner pieces and tape

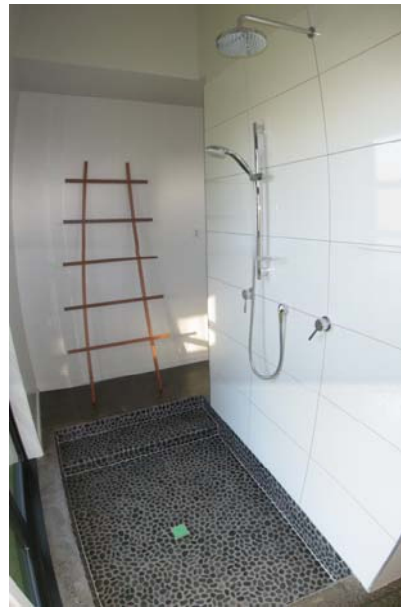

finished tiling work and all  
corners are sealed with silicone  
before grouting