



1. Get the wooden floor leveled



2. Using the shower base as template for waste hole




3. Drawing where to cut out hole and reset for leak control flange

How to get a tiled shower with up-stand on a wooden floor



9. Finished tiled shower with up-stand

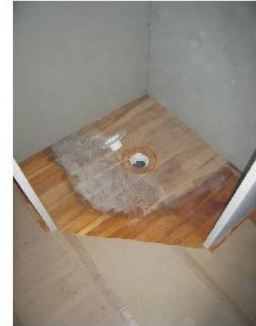

4. Cutting hole and reset for leak control flange into wooden floor



5. Installing leak control flange



8. Sealing all corners with sealing tape



7. Installing shower base and put weight on it for a short time



6. Applying special glue onto wooden floor and flange

NEW ZEALAND MADE

by Tiles and More Ltd., Gisborne, Ph/Fax: 06-8683491